

## Cotton Candy Machine Instructions

The Gold Medal Floss Cotton Candy Machine makes 3-4 servings per minute . The machine weighs 49 lbs. and its dimensions are 22" x 16" x 18". The Cotton Candy Machine has a standard 3-prong plug and requires a standard 110 volt, 15 amp plug.

Please follow the directions below to make cotton candy for your event. If you have any questions or problems please contact us at (732) 240-3268; or if after hours (732) 691-2113. We hope you enjoy the Cotton Candy Machine!

1. Please keep the cotton candy machine upright at all times.
2. NEVER Lift the machine by the spinning head. Always use the handles.
3. USE SAFETY AND CAUTION – The floss bubble should always be used. The floss head rotates at 3450 RPM and can be very dangerous. Operators need to keep hands and face clear of floss head. Spectators must stand a reasonable distance away to be safe.
4. NEVER add floss sugar when the motor is running. Always turn the machine off before adding sugar.
5. Always use the floss sugar we provide. Other sugars can damage the heating element.

### Before Plugging in the Machine:

1. Place the machine on a flat level table. Place the large bowl on the machine base. The bowl sits on the machine, there are no fasteners.
2. Place the protective plastic floss bubble on the bowl.
3. Make sure both switches on the front of the machine are in the OFF position.
4. Plug in the machine.

### Operating the Machine:

1. With the main switch OFF, fill the floss head. Always fill it 90% full with floss sugar. This quantity is necessary to obtain a balanced condition in the floss head. **DO NOT OVERFILL!** Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive Vibration of the head.
2. **IMPORTANT:** Always turn machine off before adding more sugar.
3. Turn MAIN SWITCH and HEAT SWITCH "ON."
4. Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up.
5. The machine should start making floss in a few seconds. When the unit starts making floss, you must reduce the heat setting.
6. Turn the heat control knob counter clockwise to the marked operating position to eliminate smoking. If you operate the unit at "start up" setting, you will "carbonize" the ribbon (heat element). Never operate equipment for a prolonged period of time with the HEAT CONTROL in a position that causes the sugar to smoke. This will result in excessive carbonization of the ribbon (heat element). If you smell burning sugar or see smoke, reduce the heat.

### Making Floss:

1. Keep hands away from spinning head!
2. Pick a cone; if it sticks in the stack of cones, twist it off the stack.
3. Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With a light flicking action, roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. DO NOT roll floss while the cone is inside the pan. This will pack the floss too tightly.
4. If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand. This leaves giant pockets and makes the final product appear larger.
5. Make sure room humidity is not too high, or product will be "heavy."



### Cleaning the Machine:

1. When finished making floss, run the head completely empty of sugar. Turn the heat control to the maximum position and allow the machine to run for 3-4 minutes. Turn the heat switch off and allow the motor to run for 1-2 minutes.