



Popcorn Machine

Included Items:

- Popcorn Machine
- Aluminum Scoop
- Pre-measured Popcorn and Oil
- Popcorn Bags

Electrical Requirements:

- Maximum amp draw for the popcorn machine at 120 volts is 10.5 amps.
- This figure is an approximation and may vary slightly. An overloaded electric circuit will not allow the machine to heat properly.
- The power supply cord is equipped with a machine ground (the tubular prong). For safety, always plug the machine into a grounded receptacle.
- You must have the popcorn machine grounded_ No exceptions ___

Operating Instructions:

- This machine is capable of producing 160 1oz servings per hour.
- Place the machine on a sturdy table or countertop with the controls facing the operator.
- There are 3 switches on the popper
 - Light and Warmer- Light and popped popcorn warmer
 - Kettle Motor- Turns on the motor to stir the popcorn in the kettle
 - Kettle- Kettle heat
- To begin, turn on the kettle heat and wait 3 minutes.
- Switch on the Kettle Motor that will provide the stir mechanism.
- Add the pre-measured popcorn and oil into the kettle and drop the lid back down.
- When it sounds like the popping is slowing down, pull the kettle towards you, then down to dump the popcorn out. Do not wait for all popping to stop; popcorn will burn. Some unpopped kernels are normal.
- Add the next batch of pre-measured popcorn and oil and repeat. Optimum performance is typically reached after 3-4 batches.
- Use the aluminum scoop to dispense the popcorn into sacks, sliding the narrow end into the bag and using the wide end to scoop up the popcorn.

Shut Down Procedure

- When completing the final batch of popcorn, turn the kettle heat off.
- After dumping out the final batch of popcorn, turn off the kettle motor.
- Remove all excess popcorn from the bottom of the machine.
- Pull out the old maid tray in the bottom of the machine and dump unpopped kernels into the trash.
- Turn off light/warmer and unplug the machine. Leave the aluminum scoop inside the machine.
- Wind up extension cord and place inside popcorn machine.

**If you have any questions, please call 732-240-3268 or
if after hours call (732) 691-2114 or 732-691-2113**