



## Sno-Cone Machine

### Included Items:

- Syrup(s) of Choice
- Scoop
- Sno-Cone Cups

### Electrical Requirements:

- Maximum amp draw for the machine at 120 volts is 9 amps.
- This figure is an approximation and may vary slightly. An overloaded electric circuit will not allow machine to shave ice.
- The power supply cord is equipped with a machine ground (the tubular prong). For safety, always plug the machine into a grounded receptacle.
- You must have the sno-cone machine grounded. No exceptions!!!

### Operating Instructions:

- The Sno-Cone Machine can take ice cubes or blocks of ice broken into pieces approximately 3" - 4" in size. The ice will not fit in the shaver if the pieces are too large.
- The design of the shaving chute automatically draws the ice against the blade. There is no need for manual effort.
- As a safety feature, the motor will only run while the motor button is depressed.
- Any damage to the machine will be billed at a replacement cost of \$600.00.
- Operating the Machine:
  - Set the cabinet on the drip tray. Make sure to put the drain hole over a bucket or other area that can accept any draining liquid from the machine. Melted ice and condensation go into the drip tray.
  - Plug in machine. Turn on light switch (located on front of cabinet). Light will come on in cabinet.
  - Push and hold the motor button.
  - Wait for the motor to come to full speed.
  - Fill the chute to within an inch of the top with ice cubes or block ice. The larger the pieces, the better the snow.
- Push the pusher handle down against the ice in the chute. Apply firm and even pressure to make the best snow (too much pressure will result in snow that is coarse; too little pressure will make the snow mushy).
- Repeat steps 3 - 6 until you have enough shaved ice.

### Shut Down Procedure

- When completing the final batch of ice, Unplug the machine.
- Drain remaining water by tipping machine in the direction of the drain spout.
- Leave the aluminum scoop inside the machine.
- Wind up extension cord and place inside popcorn machine

**If you have any questions, please call 732-240-3268 or  
if after hours call (732)691-2114 or 732-691-2113**